

**Discover your world!**

## **Rebel Cactus Manual**

**Everything you want to know about your Rebel Cactus smartwatch**



**A quick call, listening to music, watch pictures & movies and gaming! Go to [rebelcactus.com](http://rebelcactus.com) for even more fun. Personalize your straps in your own style with the coolest Rebel Cactus Sleeves!**

**[www.rebelcactus.com](http://www.rebelcactus.com)**



## What is on my Rebel Cactus smartwatch?

### 1. Warning and safety instructions

- 1.1. Cleaning and maintenance
- 1.2. Safe usage of Rebel Cactus smartwatch, battery and charger
- 1.3. Notes on using the battery
- 1.4. Notes on using the charger

### 2. Getting Started with Rebel Cactus smartwatch

- 2.1. What is on your Rebel Cactus smartwatch
- 2.2. Main screen Rebel Cactus
- 2.3. Screen 1 Rebel Cactus
- 2.4. Screen 2 Rebel Cactus
- 2.5. Screen 3 Rebel Cactus
- 2.6. Screen 4 Rebel Cactus
- 2.7. Telephone settings
- 2.8. Contact settings
- 2.9. Safety settings
- 2.10. Making calls with your Rebel Cactus
  - 2.10.1. Calling via direct number input
  - 2.10.2. Directly calling from your contacts
  - 2.10.3. Calling and ending a call
  - 2.10.4. H-Free (hands-free)
- 2.11. Rebel Cactus connecting with your pc to upload music, videos and movies

### 3. Other settings

- 3.1. 2 buttons on the rightside of Rebel Cactus
- 3.2. Multimedia
  - 3.2.1. FM-radio
  - 3.2.2. Soundrecorder
- 3.3. Clock
  - 3.3.1. Time and dates
  - 3.3.2. Alarmclock
  - 3.3.3. Calender
  - 3.3.4. Stopwatch
- 3.4. Organizer
  - 3.4.1. Tasks
- 3.5. Connecting bluetooth headset
- 3.6. Settings
  - 3.6.1. Familynumber setting for SOS button
  - 3.6.2. Schedule power on/off
  - 3.6.3. Restore the smartwatch
- 3.7. Internet services

### 4. Games

### 5. Own settings



**It is very importance you read first the manual, the safety warnings and precautions. So you know exactly how the smartwatch works and how to use it safely. It will increase the lifecycle of the smartwatch and it will increase your experience. If you doubt what is meant please ask your parents. Have fun and discover your world!**

## **1. SAFETY WARNINGS AND PRECAUTIONS**

Please read these notes carefully before using the smartwatch to ensure a safe and correct use.

### **1.1. Cleaning and maintenance**

- Smartwatch, batteries and charger are not fully waterproof, do not use in the bathroom or places with high humidity, avoid damp by rain for the same reason.
- Do not wipe the smartwatch with alcohol, thinner or benzene solution.
- Plugs with dirt will cause mal-contact and loose plug which affect the charging effect. Clean regularly.

### **1.2. Safe usage of the Rebel Cactus smartwatch, battery and charger**

- Your smartwatch can only use the battery and charger provided by Rebel Cactus. The use of other products may cause battery leakage, overheating, bursting and fire.
- Please switch off the smartwatch in the places where cell phones are prohibited such as:
  - o During a flight
  - o In hospitals
- Because the smartwatch may affect electronic equipment and medical devices, please follow the relevant provisions while using the smartwatch in these areas.
- Do not use your smartwatch while driving. Please stop the car before making or answering phone calls.
- Do not use your smartwatch at gas stations (repair station) or near flammable substances, or chemical agents; it might cause a fire.
- Do not use the smartwatch near weak signal or high-precision electronic devices. Radio wave interference may cause miss-operation of electronic equipment and other issues. Especially in the vicinity of the following equipment: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors, and other automation devices.
- Do not press hard on the liquid crystal display or use it to hit other things, otherwise it will result in broken LCD panels and liquid crystal fluid leakage. If the liquid crystal fluid goes into the eye it can cause blindness. In this case, please immediately flush eyes with water (do not rub the eye) and seek medical treatment immediately.

- Do not demolish or modify the smartwatch, otherwise it will cause damage to the watch, electricity leakage and electrical fault.
- Keep the smartwatch away from magnetic card and other magnetic objects; smartwatch radiation wave may remove information stored in savings cards or credit card.
- Contact with water or other liquids may cause overheating, leakage and failure of the smartwatch.
- Do not put batteries, the smartwatch or charger in the microwave oven or high pressure equipment. It may cause circuit damage, fire or other accidents.
- Do not use the smartwatch near flammable and explosive gases. The use of the smartwatch in this situation may lead to failure and cause a fire.
- Do not put the smartwatch in a place with high temperature, high humidity or a large number of dusts. It may cause malfunction.
- Place the smartwatch in a place where the children under 5 years old cannot access easily to prevent them from injury.
- Working condition: temperature 5°C~40°C; humidity: 35%~85%.
- If possible, don't use the smartwatch near an ordinary telephone, television, radio and office automation equipment so that it will not affect the function of these devices or the smartwatch itself.

### **1.3. Notes on using the battery**

- Do not throw the battery into fire, otherwise it will cause the battery to catch fire or burst.
- Do not use wires, needles or other metal objects to short-circuit the battery; this can lead to battery leakage, overheating, bursting or fire.
- Do not weld the battery terminals; otherwise it will lead to leakage, overheating, bursting or fire.
- If the battery fluid may cause blindness if in contact with eyes. In case this accident happens, please do not rub the eyes, use clean water rinse, and seek medical treatment immediately.
- Do not disassemble or modify the battery, it may lead to battery leakage, overheating, bursting and fire.
- Don't use or place battery near to fire or a high temperature device such as heater, it may lead to battery leakage, overheating, bursting and fire.

- If the battery warms up, the color or shape of the battery changes or other anomalies happen during usage, please stop use and return the watch phone to your Burg selling point.
- If the battery liquid ran into the skin, clothing, which may cause skin burns, immediately rinse with water, if necessary, please seek medical treatment immediately.
- Do not damp the battery; it may lead to battery overheating, smoke and corrosion.
- Do not place the battery direct under the sunlight or near the hot areas in a car, it may lead to fluid leakage and overheating, and may reduce performance and shorten service life.
- Do not throw old batteries in the general garbage. Follow the instructions of a battery disposal place.
- Do not charge more than 24 hours at one time.

 
#### **1.4. Notes on using the charger**

- Short-circuit of battery charger will cause electric shock, smoke and damage to the charger.
- Please do not use the charger when its cable is damaged, otherwise it will lead to fire and electric shock.
- Please clean accumulated dust on a power outlet.
- Please do not place any water container etc. next to the charger to prevent overheating, leakage and failure caused by water spills.
- If the charger comes in contact with water or other liquids, immediately pull off the charger from the power outlet to prevent overheating, fire, electric shock and charger failure.
- Please do not demolish or convert charger, otherwise it will lead to personal injury, electric shock, fire and charger damage.
- Please do not touch the charger, cables or power outlet when hands are wet, otherwise it will cause an electric shock.
- Do not place heavy objects on the charger cable or modify it; otherwise it will create electric shock and fire.

- Please pull out the power plug when cleaning or maintaining the power plug.
- Do not pull the cable of the wire; it may cause an electric shock or fire.
- Do not charge the mobile in the following circumstance: under direct sunlight and high temperature.
- Below 5 °C or above 40 °C; humid, dust or with too much vibration causes failure; in vicinity of TV sets, radios and other electrical appliances it will affect the image, sound effects.
- Rebel Cactus Smartwatch is not suitable for children below the age of 5 year.
- Damage caused by above mentioned items are not covered for guarantee.

## 2. GETTING STARTED WITH REBEL CACTUS SMARTWATCH

### 2.1. Buttons and more

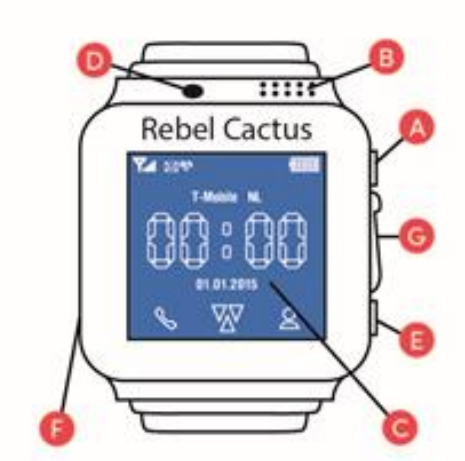


- A. Go back button + answer a call
- B. Speaker
- C. Touchscreen
- D. Camera
- E. On/ off button + ending calls
- F. Microphone
- G. USB connection for charger and wired earphones

#### What is first?

 Attention: Use only original chargers approved for use with this particular model. The use of any other types may be dangerous and will invalidate the product warranty.

#### 1. Charging


To charge the phone battery open the USB interface slot cover of the phone. With the USB triangle symbol on the charger plug facing upwards, connect the power cord from the charger to the USB interface slot. Connect the charger with an AC outlet. The battery indicator bar on the phone starts scrolling. It may take several minutes before the battery indicator bar appears on the screen. When the battery is fully charged, the bar stops scrolling. To stop charging the phone, disconnect the charger from the phone, and then from the AC outlet.

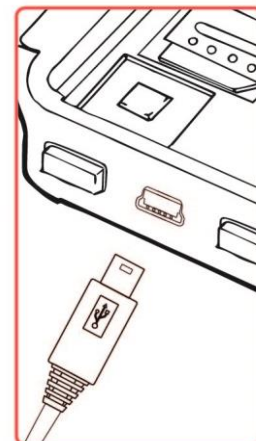

Note: Charge the battery for at least 12 hours before using the phone for the first time.

## 2. Install a SIM-card

 Note: Before removing the back cover and battery from the phone, always switch off the power and disconnect the phone from the charger or any other connecting device. Always store and use the phone with the back cover attached.

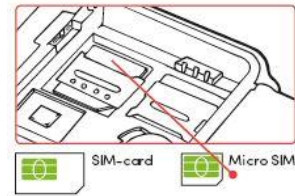


Open the back side of the watch. This is the battery. Put the micro SIM-card\* in the watch. Open the lid by moving it. Check to ensure that the bevelled corner of the SIM card is on top of the slot and that the gold-coloured area of the card is facing the inside of the phone.

\* SIM-cards can be purchased from multiple retailers and telecom providers both in stores and from online webshops.

## 3. Insert the battery

 
Place the battery on the connectors in the watch. Be aware to make the appropriate connection.

- align the gold-coloured contacts of the battery with the corresponding connectors in the battery slot (see 'Battery contact point')
- push the opposite end of the battery until it fits into the battery slot and place the back cover onto the phone
- with the extruding piece of the cover facing down, slide the cover until you hear it click into place.

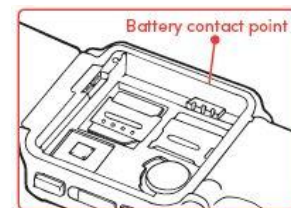

## 4. Activate the Sim-card

 Press the On/off button right under of the watch for 3 seconds (see on/off button is marked with 'E'). Now the watch phone will turn on. It will auto search the mobile network and turn to standby status. Now you can activate the SIM-card according the set up instructions of your SIM-card telecom provider. The screen says "Give PIN". Provide the PIN of your SIM-card telecom provider.

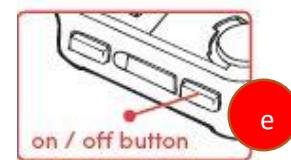


Move your fingertips or stylus pen carefully into the empty selection in the screen. A small keyboard will occur. After typing the PIN number press the upside button on the right. Secondly, press on OK on the screen bottom left.




## 2.2. Main screen Rebel Cactus

 1. Indicator GSM signal
2. Ringtone on or off
3. Battery indicator
4. Direct calling, give in phone number or history last calls
5. Entrance 4 menu screens
6. Contact list

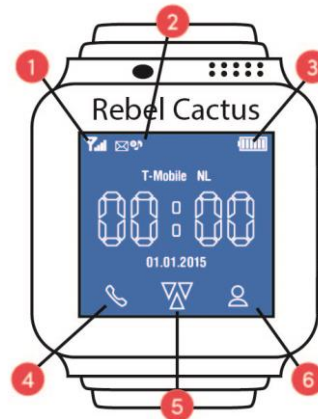


## 2.3. Screen 1 Rebel Cactus

 1. Call history
2. Audioplayer
3. SOS
4. Videocamera (camcorder)

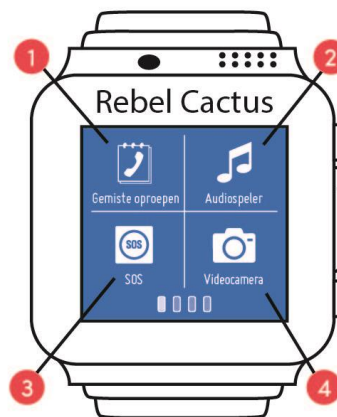


## 2.4. Screen 2 Rebel Cactus

 1. Multimedia
2. User profiles
3. Clock
4. Phonebook

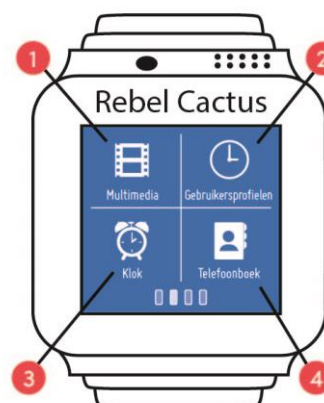


## 2.5. Screen 3 Rebel Cactus

 1. Organizer
2. Bluetooth
3. Settings
4. Services

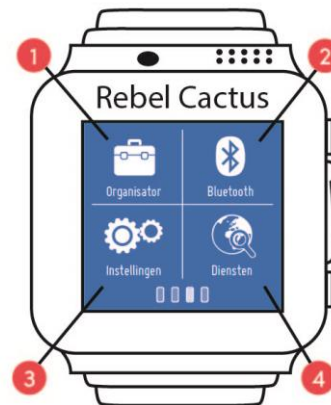

## 2.6. Screen 4 Rebel Cactus

 1. Fruit Mania
2. Games
3. SMS messaging

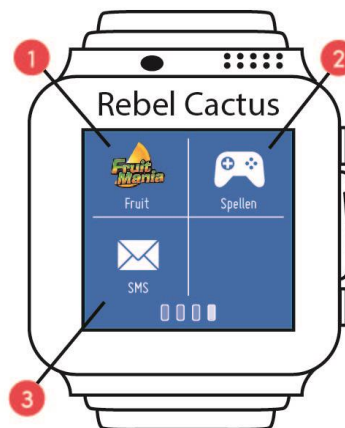

## 2.7. Telephone settings Rebel Cactus smartwatch

- In Screen 2 select 'Clock' and then select '1. Time and Date:
- First click option '1. Set home city'. Then select '2. Set time/date' for entering the right time zone (e.g. Amsterdam = GMT +1.00).
- Go to option '3 Set format' and select '24h' in 'Time' and 'DD MM YY' as 'Date' format.

## 2.8. Setting up contacts

Go to 'Phonebook' in menu. Press 'Add new contact', upper left position in the screen. 'New contact' now turns blue. Choose 'Options' left under position on the screen. Choose now 1. 'Select' to add a new contact, choose 'Save' 1. on the SIM-card or 2. on the smartwatch.

After an new screen will open 'New input'; add one by one the numbers of daddy, mommy, grandma, grandpa etc..

Use your fingertips and press the keyboard or press the world globe left under position on the screen. Write the letter you need with your fingertip and the smart watch will help you providing the right letter for you. After you have finished writing the correct name please do return to the keyboard by pressing the globe again and now you can add the phone number.

Press 1x shortly the upper side button if the screen changes. You will automatically return in the setup modus/screen.

## **2.9. Safety settings**

TIP! For daily use we do advise you to disable the forced entering of a PIN number. It is rather complicated for children to remember and enter a PIN password for starting up the smartwatch.

Go to Screen 3 and select '3 Settings' then select option '4 Security settings'. Then select option '1 Sim security and select option '1 PIN lock'. Then select 'Off' in the bottom left part of the screen.

In case the screen is requesting "Give PIN". Provide the PIN of your SIM-card telecom provider. Move your fingertips or stylus pen carefully into the empty selection in the screen. A small keyboard will occur. After typing the PIN number press the upside button on the right. Secondly, press left under on OK on the screen.

## **2.10. Calling with Rebel Cactus**

### **2.10.1. Direct calling**

Go to the main screen. Press the telephone icon, left under. Enter a phone number and press the top right button for a direct call. To cancel press the button down right.

### **2.10.2. Making calls from the phonebook**

Press the puppet icon on the main screen. Scroll up and down through the list and select the contact, simply press the top right button to make a call.

### **2.10.3. Answering a call and ending a call**

Simply press the green telephone icon or press the top right button to answer a call. Ending a call is easy by just pressing the button right under.

#### **2.10.4. H-Free (hands-free)**

If Rebel Cactus smartwatch is at H-free you will hear the caller very easily. You may switch H-free on and off during the call. You will find this option during a call on the screen, right under.

#### **2.11. Connect Rebel Cactus with your pc and upload music, video's and movies**

Connect the USB cable with small plug into Rebel Cactus and the bigger USB plug with your computer. Now you press 'Massa storage' on Rebel Cactus. The pc will recognize the external source.

**Note: Rebel Cactus supports MP3 music files, MP4, AVI and 3GP video files.**

Now you go to the directory on your pc with music and video files. Select the file you like, and copy it to the directory 'My Music' on Rebel Cactus (2 GB memory card). After you have uploaded all the files you want please unlock the USB cable.

In the menu of Screen 1 please select 'Audioplayer' for listening to music or 'Videocamera' for viewing/listening to a movie. This is also available on Screen 2 by selecting 'Multimedia'.

Select 'List' on this screen bottom left, select 'Options' and then select 'Option 1. Refresh list'.

Select 'back' and press 'play' to start the music or video.

Enjoy listening to your favorite music via either the loudspeaker, the ear set or a cool Bluetooth headset via wireless Bluetooth.

### **3. Other settings**

#### **3.1. 2 buttons on the right side of the smartwatch**

1. Press 1x shortly on the top right button. Rebel Cactus awakes form sleeping modus (black screen) to clock modus.

Note: Your Rebel Cactus is still on during sleeping modus; so your child can still be reached!

There are different kind of clocks available, helping kids to learn watching the time. Tick in the middle the screen gently and a new type of clock will appear.

2. Press 2x the top right button. The smartwatch will go to the Main screen.

3. With the button right under you will activate Rebel Cactus from sleeping modus. Now the watch screen will pop up. Press again and the screen will jump one step back in the menu.

4. Press the button right under longer, for 3 seconds, and you switch off your Rebel Cactus. Note: this means that your child can not be called by anyone!

## **3.2. Multimedia**

### **3.2.1. FM-radio**

Select Multimedia in screen 2 and press option 4. The FM-radio only works, when the wired ears are connected to the mini USB slot. Via options and settings, you can select the music is played on the speaker.

### **3.2.2. Soundrecorder**

Select Multimedia in screen 2 and press option 5. Press the record button to start recording. Look at options, to see the multiple settings, like listening to soundbites or sending the your own record.

## **3.3. Clock**

### **3.3.1. Time en date**

Select screen 2 and press option 3 Clock. Choose Time and Date to update the right time and date. If you uncouple the battery, make sure to replace it within 1 minute, otherwise you will lose the right time and date settings.

### **3.3.2. Alarmclock**

Select screen 2 and press option 3 Clock. Choose Alarmclock to activate the alarm function.

### **3.3.3. Calender**

Select screen 2 and press option 3 Clock. Choose Calender, here you can use several different calender functions. Like week view or month view and you can start planning dates or tasks.

### **3.3.4. Stopwatch**

Select screen 2 and press option 3 Clock. Choose Stopwatch in order to use the stopwatch.

## **3.4. Organizer**

### **3.4.1. Tasks**

Select screen 3 and press Organizer and choose option 2. Press OK and Add. At subject describe shortly the subject. You can prioritize it, put it on high. Now set time and date en turn the alarm on. Here you have several options. After all settings, you press Save. This task function is really handy for children who needs to take their medicine. Due to the alarm on the tasks, children will be reminded by the task, hear the alarm and execute the action mentioned in the task.

### **3.5. Connect bluetooth headset**

Select screen 3 and press Bluetooth and choose option 1. and turn the power ON. Go to option 2 and turn the visibility ON. Go to option 4 and press OK. Now the smartwatch will search for other Bluetooth devices. Select the device you want to connect and press in the left lower corner on pair. If the connection is successful, a message will appear that the devices are connected. Now you can leave this menu and start playing your music. Beware! if you don't use the Bluetooth device, please turn the power of the Bluetooth Off in order to save the battery usage.

### **3.6. Settings**

#### **3.6.1. Family number setting**

Swipe to screen 3 and select Settings. Choose option 1. Family number setting. Press OK. You can now input 1 guardian number. Beware! If the SOS reaches a voicemail the call route is ended.

#### **3.6.2. Schedule power on/off**

Swipe to screen 3 and select Settings. Now choose Phone settings and choose option 1. Press OK. Now you can schedule power on and off. Really handy for during school times. For example schedule power off, when school start at 08.30 hours and schedule to turn it on at 15.10 hours when school is finished.

#### **3.6.3. Restore settings**

Swipe to screen 3 select Settings. Choose option 8. restore settings and input code: 1122 .

### **3.7. Internet services**

To access the internet, you fist need to create a data account. Select data account and press OK. Press at add PS account and press. Please only fill out the APN code off your provider. Most providers use the word INTERNET. Search on google for the de APN of your provider. All other fields can be left empty. Now go internet services to access the internet.

## **4. Games**

### **4.1. Fruitmania: Apple to apple, pear to pear!**

Swipe to screen 4 select Fruit, select language English and turn off sound, by pressing on the red cross. Press Play to start the game. Try to score as much point as possible by selecting the same fruits. So apple to apple and pear to pear. Good luck!

### **4.2. Games**

Swipe to screen 4 and select Games. Here is a list of your own installed Java minigames. Save them on the external memory card in the file Games, install the game and it will displayed on this list and so easy for you to use.

### **4.3. SMS**

Swipe to screen 4 select SMS. Here messages can be received and read. Also new messages can be created and send. We recommend to use soundbites or the sms template with short standard sentences.

## **5. Own settings**

### **5.1. Ringtones for incoming call and turning on/off**

Via profiles you can attach your own ringtones to incoming calls on or off when you turn the devices on/off. Save the MP3 ringtone file on the external memory card. Go to profiles and adjust the profiles by selecting your favorite ringtone.

### **5.2. Soundvolume Belvolume**

During a call you can adjust the sound volume of the conversation. Press the speaker icon on the screen.

### **5.3. Attach picture to contacts**

If you upload some pictures on the smartwatch, you can attach them to specific persons in your contacts. Go to Phonebook, go the contact, select adjust and attach the picture to the contact.

### **Any further questions?**

Please check out our Frequently Asked Questions section on [www.rebelcactus.com](http://www.rebelcactus.com).

You may also want to reach out to our customer services team. Please mail your request to [customerservice@rebelcactus.com](mailto:customerservice@rebelcactus.com) . Or just give us a call on +31 79 363 32 38.

Please enjoy your Rebel Cactus smartwatch. Discover your world!

**[www.rebelcactus.com](http://www.rebelcactus.com)**